


Inflatable Sofa

Product Parts

- 1 - Inflatable Chair (x2)
- 2 - Graphic
- 3 - Electric Blower (optional)
- 4 - Hand Pump (optional)

Note:
Inflatable Sofa requires two inflatable chairs.

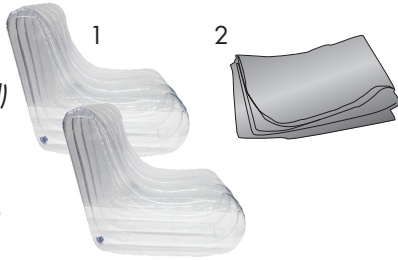

Display Set-Up

Step 1


Insert the Optional Blower or Pump's (3/4) hose into the intake valve of one of the Inflatable Chairs (1) and begin to fully inflate.

*** DO NOT OVER INFLATE THE CHAIR AS THIS MAY CAUSE DAMAGE.**



Step 3


Insert the deflated Inflatable Chair (1) into the left side of the Graphic (2) and Insert the Optional Blower or Pump's (3/4) hose into the intake valve of the Inflatable Chair (1) and begin to inflate until about 2/3 full. *** DO NOT FULLY INFLATE AT THIS TIME.**

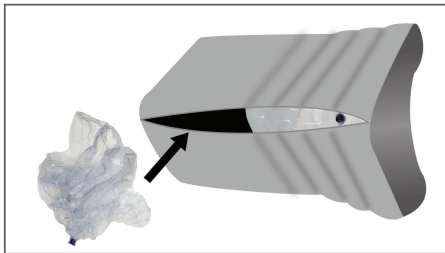

Step 5


Adjust the seams of the Graphic (2) to align to the seams of the Inflatable Chair (1). Once aligned, continue to inflate until Graphic (2) is tight to the Inflatable Chairs (1).

*** DO NOT OVER INFLATE THE CHAIR AS THIS MAY CAUSE DAMAGE.**

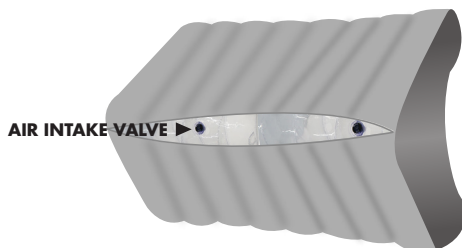


Step 2

Slide the Inflated Chair (1) into the opening of the Graphic (2) and slide the Inflatable Chair (1) all the way over to the right side of the Graphic (2) and align the seams of the Graphic (1) to the seams of the Chair (1).

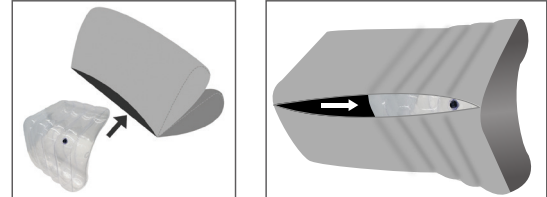


Step 4

Locate the clear pockets on the sides of the Inflatable Chairs (1) and align one chair to the other (as shown).

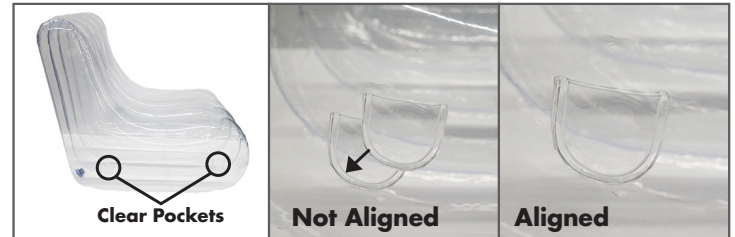

Step 6

Close the Intake Valves on both of the Inflatable Chairs (1).

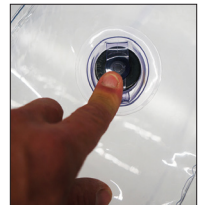

Step 7

Reach in between the chairs and pull the elastic strap toward the opening and attach to the corresponding button (as shown).

