



ONEFABRIC™

SET-UP INSTRUCTIONS

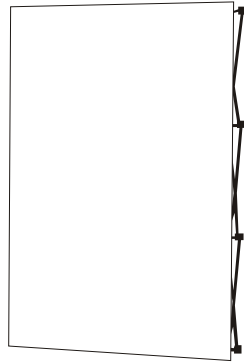


Warning:
To avoid damage. **ALL** hooks must be disconnected before collapsing the frame. End Caps must be disconnected from brackets **BEFORE** collapsing frame.


How to set up your OneFabric™:

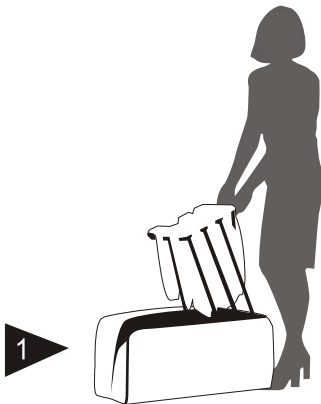


1 Carefully remove frame and graphic from nylon bag.

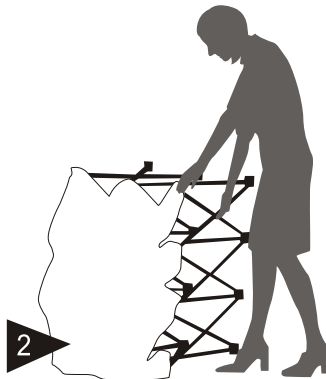


2 Ensure "adjustable feet" of frame are on the floor. Pull up display into upright position.

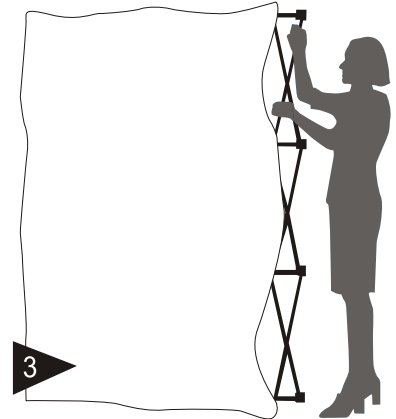

3 Lock all hooks between front and back hubs. If supplied with End Caps, attach end cap Velcro to end cap brackets on both sides.

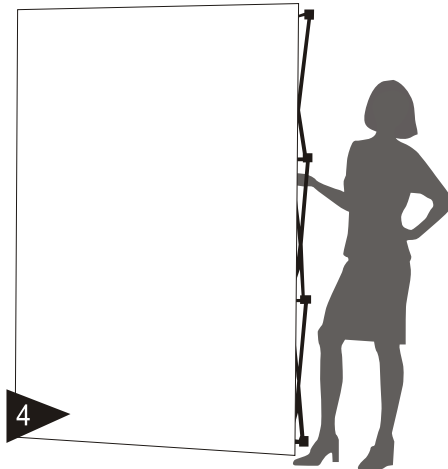

4 Adjust leveling feet as needed. OneFabric™ display can now easily be moved into position.

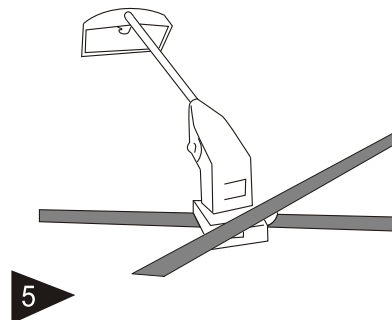

5 **OPTIONAL**
Attach lights to top of frame by sliding the plastic "x block" under the rear tube and over the front tube.