



Warning:
 To avoid damage. **ALL** hooks must be disconnected before collapsing the frame.
 End Caps must be disconnected from brackets **BEFORE** collapsing frame.

How to attach or replace your OneFabric™ graphics:

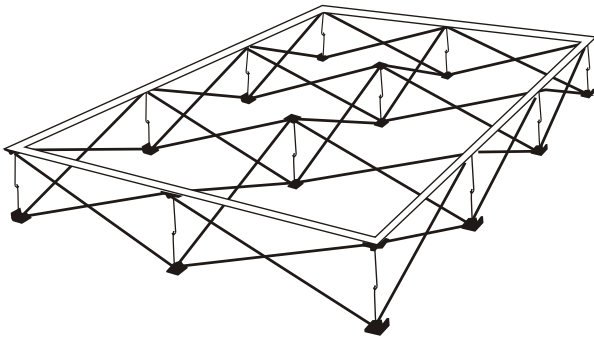


1

Assemble frame and lay flat on its back.
 Remove existing graphic.

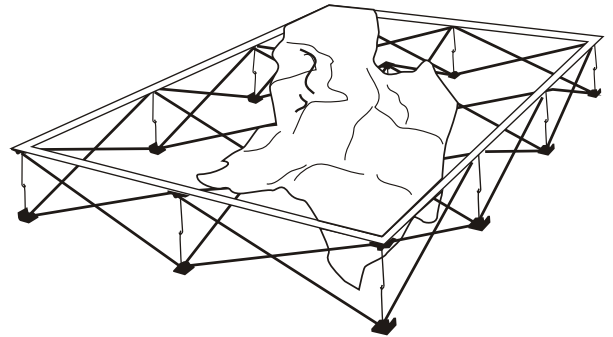


2

Starting at one corner, attach velcro on the Graphic to velcro on the frame.
 NOTE: Velcro on the graphic should extend approx. 1/4" (.6cm) beyond velcro on the frame (it should not be flush).

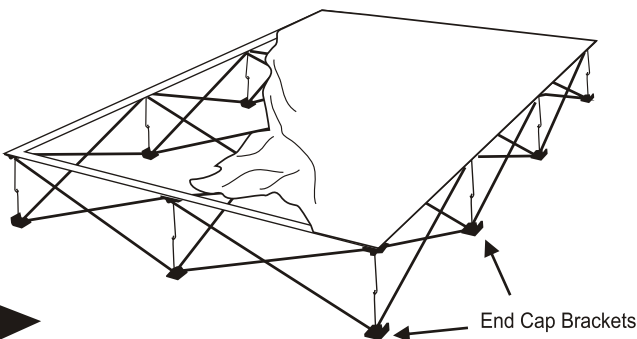

3

Working in a continuous direction around the frame, attach the rest of the graphic.
 If supplied with End Caps, attach end cap Velcro to end cap brackets on both sides.

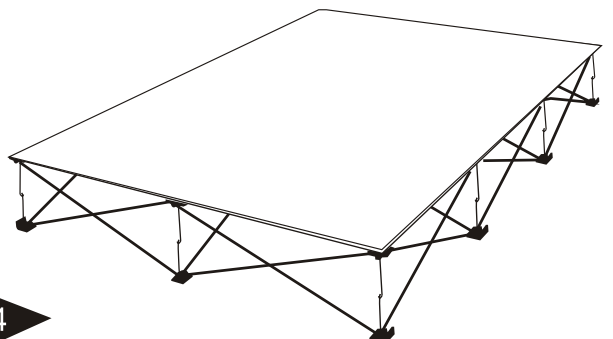

4

If needed, adjust velcro for taut fit.