


# Element Retractor

## Product Parts


- 1 - Retractor Base
- 2 - Ballast (includes cap)
- 3 - Banner Rail (x2)
- 4 - Telescoping Pole
- 5 - Stakes (x4)

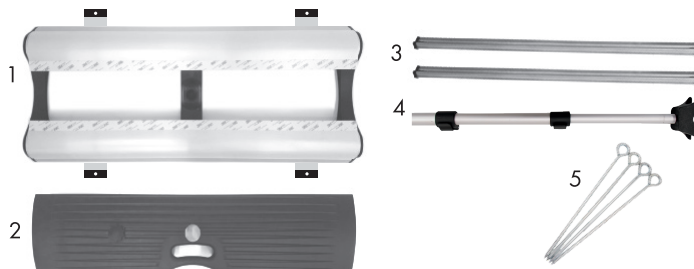

## Display Set-Up

### Step 1

Separate and remove Ballast (2) from Retractor Base (1). Unscrew cap. Fill with tap water or sand. Replace cap.

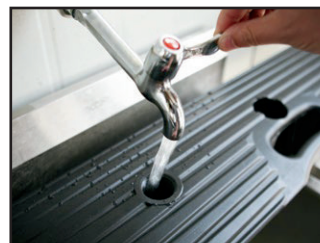

### Step 2

Place Ballast (2) back into Retractor Base (1). Pull out feet.



### Step 3

Place Telescoping Pole (4) into center hole on Ballast (2).



### Step 4

With Telescoping Pole inserted into the Ballast, open levers and extend the Telescoping Pole (4) to one of three desired positions, lock in place by closing levers. **Do not exceed 81.5" high.**




### Step 5

Gently lift the Banner Rail (3) and connect the Telescoping Pole (4) connector hook into the rear groove on the Banner Rail (3).



### Step 6

Repeat step 5 with the second \*graphic.

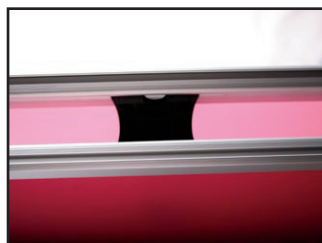

### Step 7

If displaying on soft ground, secure retractor using Stakes (5). Push Stakes through holes located on feet.

## Storage and Care

Store in a cool dry location. To clean hardware, wipe with a damp cloth.

\*Graphics are not replaceable.