





# BrandStand Satellite™

## Setup Instructions

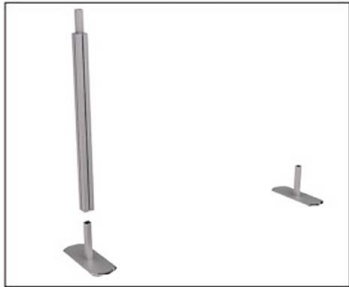

**Step 1**  
Place the feet in the assembly area approximately six feet apart and slide the vertical pole sections onto the foot as shown.

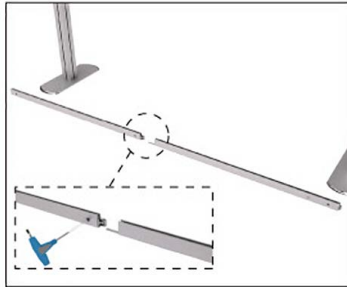

**Step 2**  
Assemble top and bottom horizontal profiles. Slide two sections together as shown. Using the torx key, rotate clockwise 1/4 turn to lock in place and tighten the torx screw on the bottom of the profile.




**Step 3**  
With torx locks facing the back of display, slide the fabric into the curved side of the top and bottom profile.




**Step 4**  
Attach the horizontal profiles to the vertical poles using the torx key. Bottom profile should be flush with the bottom of the vertical poles. To eliminate the need of a ladder, temporarily attach the top profile at eye level as shown in step 5.




**Step 5**  
Open the yellow sandwichboards and place them parallel to vertical poles.

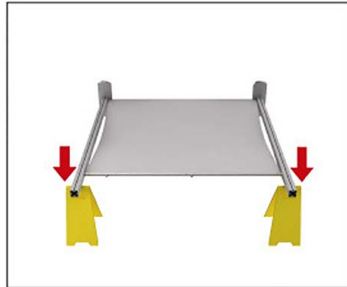


**Step 6**  
Tilt the display down so the vertical poles rest on the yellow sandwich boards.

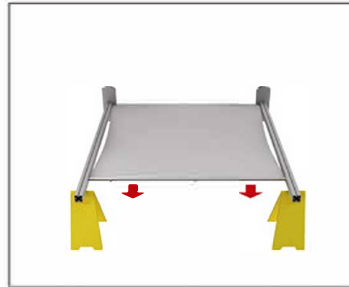


**Step 7**  
Release the top profile and attach flush with the top of the vertical poles using the torx key. Beginning at one end, tuck the side of the fabric into the center slot of the vertical poles.

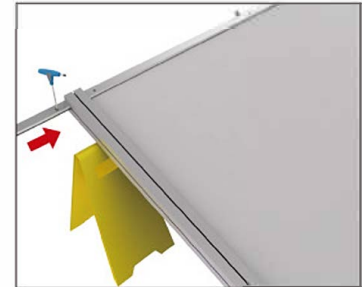


**Step 8**  
If used, attach the end cap profiles as shown using the torx key.

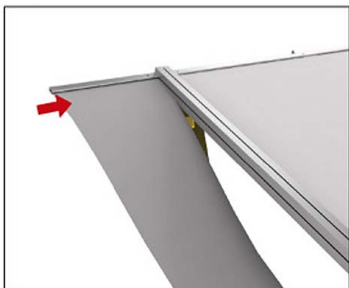

**Step 9**  
Slide the end cap fabric into the top and bottom profile as shown. Beginning at one end, tuck the side of the fabric into the center slot of the vertical pole. If you are using Plexiglas end caps, see instructions supplied separately.

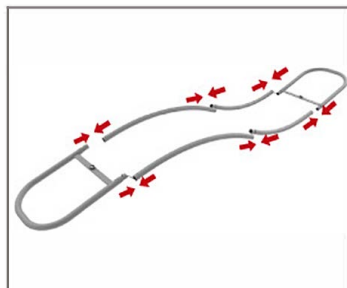


**Step 10**  
All sections are pre connected, just push together until parts click.

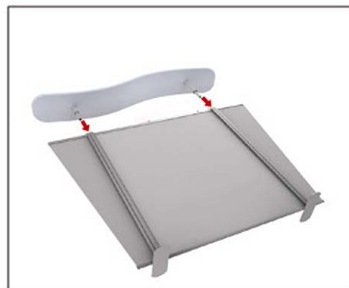


**Step 11**  
Lift the roof assembly and slide the poles evenly and smoothly into the vertical poles. The fabric zipper should be facing down toward the back of the unit.




**Step 12**  
If used, you may now attach lights. Slide the "T" section into the slot. Tighten with the round thumb nut.

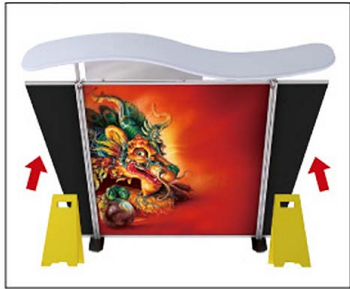

**Step 13**  
While standing in front of the unit,  
**SLOWLY**, lift with the unit to the  
vertical position.

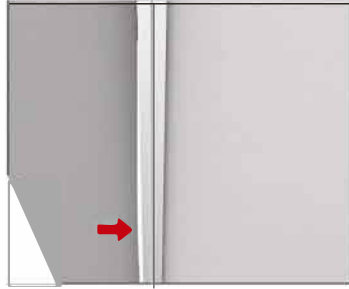

**Step 14**  
Confirm all the fabric edges are  
pushed neatly and evenly into the  
horizontal and vertical profiles.

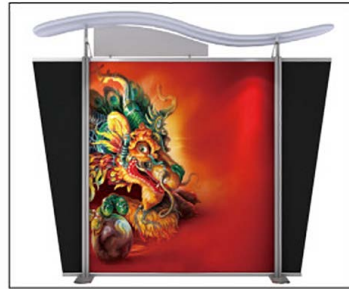

**Step 15**  
Enjoy.

