

WLM-ORCA B – Straight Header

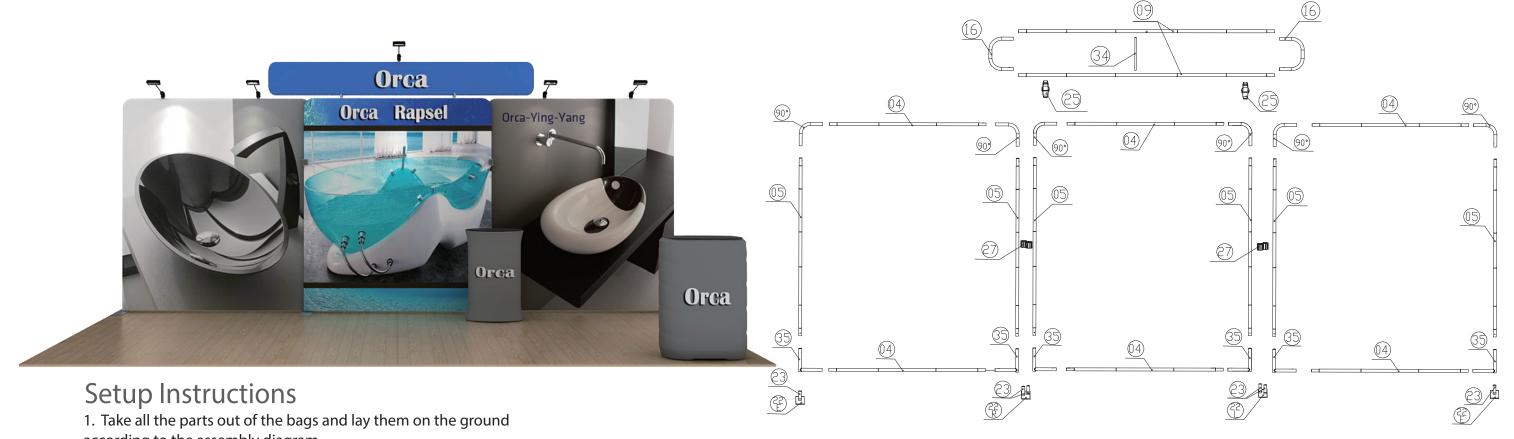

- according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

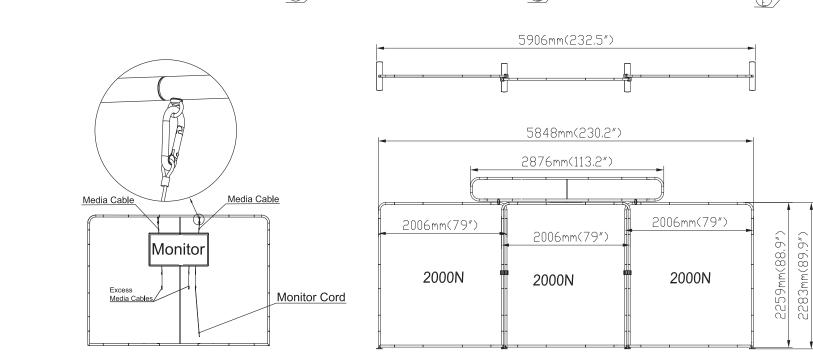

Frame		Frame		Frame Frame		Frame	Frame		Frame			TV kit		Shippii	ng Case	accessories
35 6	16	2										22.6"		CA900		2000N*3
27 2	(22) R	1										32"		CA500		
23 6	(22 L	1	34)	1								40"				
05 6	(22) E	2	09	2												
04) 6	90°	6	25 clear	4												
NO. Quantity Conf	rm NO.	Quantity Confirm	NO.	Quantity Confirm	NO.	Quantity Confirm	NO. Q	uantity	Confirm NO.	Quantity	Confirm	NO.	Confirm	NO.	Confirm	