

# TUBOZIP BANNER

exhibitDEAL




1. Open padded carry bag containing unassembled stand



2. Remove frame components from the bag



3. Lay out and assemble frame until pieces snap together securely

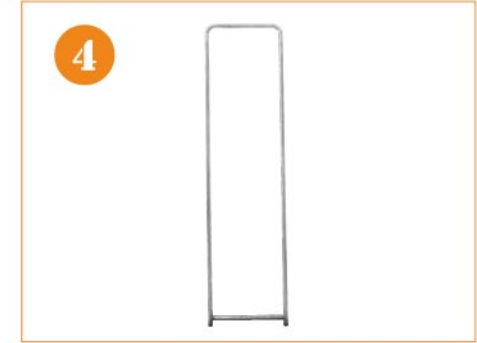

4. Completed frame shown here



5. Carefully slide graphic over the frame to cover



6. Fasten with zipper as shown



7. Attach base with provided screws



8. Completed unit with graphic shown here